
Index

A

- accessing Configuration/Setup Utility program 4-7
- activity monitor option 4-22
- adapters, installing 3-6
- adding
 - drivers 2-4
 - internal drive 3-9
 - memory modules 3-3
 - SBC 3-3
 - system memory 3-3
- address conflicts 5-7
- administrator password option 4-15
- advanced power management option 4-21
- advanced setup option 4-18
- advanced video memory option 4-18
- air filters 4-2
- amplitude-shift keying (ASK) 6-8
- APM BIOS mode option 4-22
- application-specific drivers 4-23
- assignments, serial port 4-26
- automatic power management (APM) 4-22

B

- backplane and cables (FRUs) 8-4
- backplane, removing and replacing 7-48
- battery failure error message 5-10
- battery, memory-retention 4-25
- battery, replacing 7-47
- beep symptoms 7-20
- beeps, POST 7-3
- BIOS level 7-2
- BIOS, updating 4-31
- blank screen 5-5
- boot error, hard disk 7-33
- bottom cover (FRUs) 8-2
- broken cover lock 5-6
- bus card connectors C-4

C

- C2 security 4-4
- cable connectors C-4
- cables, connecting 2-2
- cache control option 4-18
- card hold-down spacers 3-6
- channel assignments, DMA D-2
- chassis or cover intrusion 4-4
- check voltage setting 2-1
- checkouts
 - beeps 7-20
 - display 7-18

checkouts (*continued*)

- general 7-11
- keyboard 7-12
- Module Tests Menu 7-6
- no beeps 7-21
- power supply 7-16
- power-supply connections 7-17
- printer 7-15
- USB port 7-13

code page 4-31

color graphics adapter (CGA) 4-30

color, high resolution 4-30

command-line options 7-7

communications 4-27

component layout 1-2

COMx settings (serial port) 4-26

configuration

- 7587 Computer 4-1
- activity monitor 4-22
- administrator password 4-15
- advanced power management 4-21
- advanced setup 4-18
- APM BIOS mode 4-22
- cache control 4-18
- changing 4-6
- conflicts 4-5
- date and time 4-13
- device change 5-13
- DMA resources 4-21
- drive security option 4-14
- errors 4-5
- Ethernet setup 4-18
- hardware change 5-9
- I/O port resources 4-20
- interrupt resources 4-21
- ISA legacy resources 4-19
- memory change 5-13
- memory resources 4-20
- overview 4-5
- PCI control 4-19
- plug and play control 4-19
- power-on password 4-15
- product data 4-9
- ROM shadowing 4-19
- start options 4-16
- system security 4-14
- system summary option 4-9
- USB setup 4-18
- utility program 4-6
- video 4-31
- video memory setup 4-18
- viewing information 4-9

- configuration (*continued*)
 - watchdog/thermal setup 4-18
- Configuration/Setup Utility program
 - activity monitor option 4-22
 - administrator password option 4-15
 - advanced power management option 4-21
 - advanced setup 4-18
 - APM BIOS mode option 4-22
 - cache control option 4-18
 - date and time option 4-13
 - description 5-1
 - devices and I/O ports option 4-10
 - DMA resources 4-21
 - drive security option 4-14
 - Ethernet setup 4-18
 - hard disk drive option 4-12
 - I/O port resources 4-20
 - IDE drives setup option 4-12
 - interrupt resources option 4-21
 - ISA legacy resources 4-19
 - main menu screen 4-8
 - memory resources option 4-20
 - moving around in the screens 4-8
 - PCI control option 4-19
 - plug and play control 4-19
 - power-on password 4-15
 - product data option 4-9
 - ROM shadowing 4-19
 - run 2-4
 - service procedures 7-1
 - start options 4-16
 - starting 4-7
 - system security option 4-14
 - system summary 4-9
 - USB setup 4-18
 - use 4-6
 - video setup option 4-12
 - watchdog/thermal setup 4-18
- conflicts, eliminating assignment 5-7
- connecting cables 2-2
- connectivity E-14
- core voltage, processor 6-14
- cover intrusion connector 6-10
- cover intrusion detection 4-4
- cover lock, broken 5-6
- cover, remove 3-2

D

- data, transferring 4-27
- date and time option 4-13
- date and time, setting 4-13
- detecting POST errors 5-1, 5-2
- detection, cover intrusion 4-4
- device configuration error 5-13

- device drivers
 - overview 4-23
- device drivers updates, downloading 7-2
- device records A-1
- devices and I/O ports option 4-10
- devices, handling discharge-sensitive E-12
- diagnostic
 - beep codes 7-20
 - command-line options 7-7
 - diskette 7-5
 - error messages 5-2, 7-4, 7-26
 - program 7-5
 - QAPLus/PRO program 7-5
 - starting diagnostic program 7-8
 - tests, extended memory 7-8
 - tools 5-1, 7-3
- dimensions B-1
- DIMMs, installing 3-3
- direct memory access (DMA) channel
 - assignments 4-23, 4-24, D-2
- discharge-sensitive devices, handling E-12
- disconnecting cables 7-34
- diskette
 - diagnostic programs 5-3
 - Diagnostics 5-1
 - drive access 4-3
 - drive in-use lights 5-4
 - drive replacement 7-36
 - FRUs 8-8
 - parts catalog 8-8
 - security option 4-14
 - starting the diagnostic program 7-8
 - update 4-31
- diskettes drives, security 4-14
- display
 - blank screen 5-5
 - checkout 7-18
 - distorted screen 5-5
 - error codes 5-2, 5-8
 - jitter 5-5
 - problems 5-5, 5-8
 - rolling screen 5-5
 - selecting 4-30
 - self-tests 5-4
 - support 4-31
 - SVGA 4-30
 - wavy screen 5-5
- display power management signaling (DPMS) 6-3
- DMA channel assignments 4-23, 4-24, D-2
- DMA resources option 4-21
- downloading programs 7-2
- DPMS
 - See display power management signaling (DPMS)
- drivers
 - adding 2-4
 - application specific 4-23

- drivers (*continued*)
 - device specific 4-23
 - installing 2-4
 - overview 4-23
 - video 4-30
- drives
 - diskette drive replacement 7-36
 - hard disk 4-12
 - hard disk boot error 7-33
 - hard disk jumper settings C-2
 - in-use lights 5-4
 - installing external device 4-28
 - installing internal 3-9
 - parts catalog 8-8
 - replacing hard disk 7-37
 - security option 4-14
- dual inline memory modules (DIMMs) 3-3

E

- EEPROM code, updating 4-31
- EEPROM, Flash 4-31
- electrical safety E-8
- electronic emission E-14
- electrostatic devices, handling E-12
- emission, electronic E-14
- enhanced graphics adapter (EGA) 4-30
- environment 1-4
- error recovery timer 4-29
- errors
 - battery failure 5-10
 - beep symptoms 7-20
 - code format, POST 7-4
 - configuration 4-5
 - detecting POST 5-2
 - device configuration 5-13
 - diagnostic 5-9
 - hard disk boot error 7-33
 - memory configuration 5-13
 - message types 7-4
 - messages 5-2, 5-8, 5-9, 7-26
 - numeric codes 7-22
 - POST 4-6, 5-2, 5-9, 5-10
 - prompt 5-8
 - software 5-9
 - types of messages 7-4
- Ethernet access 4-3
- Ethernet setup option 4-18
- external serial devices, installing 4-26

F

- fan (power supply) problems 5-6
- fans and filters (FRUs) 8-6
- feature cards, replacing 7-35

field-replaceable units (FRUs)

- part numbers
 - backplane 8-4
 - battery 8-2
 - bottom cover 8-2
 - cables 8-4
 - diskette drives 8-8
 - fans and filters 8-6
 - hard drives 8-8
 - IBM SBC 8-2
 - keyboard/mouse 8-9
 - power cords 8-10
 - power supply 8-8
 - processor 8-2
 - top cover 8-3
- removing
 - adapters 7-35
 - backplane 7-48
 - battery 7-47
 - diskette drive 7-36
 - front fan 7-38
 - hard disk drive 7-37
 - LED assembly 7-39
 - memory modules 7-45
 - power supply 7-37
 - power switch 7-40
 - processor chip 7-43
 - SBC 7-40
- Flash (BIOS/VPD) update procedure 7-2
- flash, verifying revision level 4-31
- flicker 4-30
- front fan, replacing 7-38
- front-view dimensions B-1

G

- general checkout 7-11
- general problems 5-6
- general safety E-7
- graphics 4-30
- grounding requirements E-12
- guide, safety inspection E-11

H

- handling static-sensitive devices E-12
- hard disk
 - bad sector 5-8
 - boot error 7-33
 - drive access 4-3
 - FRUs 8-8
 - jumper settings C-2
 - parts catalog 8-8
 - replacing 7-37
 - security option 4-14
 - testing 5-8

- hardware
 - diagnostic error messages 7-26
 - problems 5-1, 7-3
 - testing programs 5-1
- heat output 1-4
- high-resolution color 4-30
- hold-down, card spacers 3-6
- home page, Internet 7-2
- host-bus interface 6-3
- hub, USB port 4-29

I

- I/O port resources option 4-20
- I/O ports, configuration information 4-10
- IBM SBC
 - See* single-board computer (IBM SBC)
- IDE drives setup option 4-12
- in-use lights 5-4
- indicator lights problem 5-6
- indicators, SBC 6-3
- industry-standard architecture (ISA)-bus adapters D-1
- infrared port (IrDA) 6-8
- inspection guide, safety E-11
- installing
 - 7587 Computer 2-1
 - adapters 3-6
 - application programs 4-3
 - card hold-down spacers 3-6
 - device drivers 2-4
 - external parallel devices 4-28
 - external serial devices 4-26
 - internal drive 3-9
 - internal options 2-2
 - memory modules 3-3
 - options 3-1
 - parallel devices, external 4-28
 - RAM upgrade 3-3
 - SBC 3-3
 - serial devices, external 4-26
- interface standard, serial IR 6-8
- intermittent problems 5-6
- internal drive, installing 3-9
- Internet address 7-2
- interrupt resources option 4-21
- intrusion connector, cover 6-10
- ISA legacy resources 4-19
- ISA-bus adapters D-1

J

- jumpers and switches, SBC 4-24

K

- keyboard part numbers 8-9
- keyboard problems 5-6
- keyboardless operation mode 4-4
- kits, installing memory upgrade 3-3

L

- languages 4-31
- layout
 - 7587 Computer components 1-2
 - SBCs 6-2
- LED assembly, replacing 7-39
- LEDs 4-1
- lithium battery 4-25
- lock for cover, broken 5-6
- logical unit numbers, changing 7-8

M

- mass storage device configuration information 4-12
- MCGA (multicolor graphics array) 4-30
- memory architecture, unified 6-3
- memory resources option 4-20
- memory setup option, video 4-18
- Memory Test Group 7-8
- memory-retention battery 4-25
- memory, adding 3-3
- menu, module tests 7-6
- messages
 - battery failure error 5-10
 - beep/blink patterns 7-4
 - device configuration error 5-13
 - diagnostic error 5-9, 7-26
 - enter password prompt 5-2
 - error 5-2, 7-4
 - memory configuration error 5-13
 - multiple 7-4
 - POST error 5-1, 5-2, 5-10, 7-4
 - software-generated 7-4
 - types of error 7-4
- miscellaneous connectors 6-10
- Module Tests Menu 7-6
- module tests selection 7-8
- monitor, thermal/watchdog 4-29
- mouse (FRUs) 8-9
- mouse problems 5-6

N

- no beeps 7-21
- notices E-1
- numeric error codes 7-22

O

- on/off switch 4-1
- opening the 7587 Computer 3-2
- opening the system unit 7-35
- operator information 4-1
- options, adding 3-1
- overview of 7587 Computer 1-1

P

- parallel devices, external 4-28
- parallel port assignments 4-27
- parallel port mode, changing 4-28
- parts catalog 8-1
 - backplane 8-4
 - battery 8-2
 - bottom cover 8-2
 - cables 8-4
 - diskette drives 8-8
 - fans and filters 8-8
 - hard drives 8-8
 - IBM SBC 8-2
 - keyboard/mouse 8-9
 - power cords 8-10
 - power supply 8-8
 - processor 8-2
 - top cover 8-3
- passwords
 - administrator 4-15
 - power-on 4-3, 4-15, 5-2, 5-6
 - prompt 5-8
 - removing 4-4
 - system administrator 4-4
- PCI control option 4-19
- physical dimensions B-1
- pin assignments, serial port C-7
- plug and play control 4-19
- pointing-device problems 5-6
- port access, USB 4-3
- port assignment conflicts 5-7
- ports, configuring I/O 4-10
- POST
 - See power-on self-test (POST)
- power cord part numbers 8-10
- power supply 1-4
- power supply, replacing 7-37
- power switch, replacing 7-40
- power-on password 5-2, 5-6
- power-on password option 4-15
- power-on problems 5-2, 5-7
- power-on self-test (POST)
 - battery failure error 5-10
 - beeps 7-3
 - description 5-1
 - detecting problems 7-3

- power-on self-test (POST) (*continued*)
 - error 4-6
 - error detection 5-1, 5-2
 - error messages 5-2, 5-10
 - operation 5-1, 5-2
 - problem detecting 7-3
 - updating 4-31
- power, switching off 7-34
- problems
 - diskette drive 5-4
 - display 5-5
 - error prompt 5-8
 - fan 5-6
 - forgotten power-on password 5-6
 - general 5-6
 - hardware 5-1
 - hardware related 7-3
 - intermittent 5-6
 - keyboard 5-6
 - mouse 5-6
 - no beeps 5-5
 - occasional 5-6
 - options 5-7
 - overview 5-1
 - password prompt 5-8
 - pointing-device 5-6
 - power-on 5-2, 5-7
 - printer 5-8
 - screen distortion 5-5
 - screen jitter 5-5
 - screen roll 5-5
 - software 5-1, 5-9
 - solving 5-1, 5-2
 - troubleshooting charts 5-4
 - undetermined 7-33
 - user error 5-1
 - wrong number of beeps 5-5
 - wrong screen characters 5-5
- processor chip, removing and replacing 7-43
- processor voltage selection 6-14
- product data option 4-9
- program
 - Configuration/Setup Utility 5-1
 - diagnostic 5-1, 5-3
 - navigation 7-6
 - power-on self-test (POST) 5-1
 - program, diagnostic 7-5
 - QAPLus/PRO 7-5
 - system 4-6, 4-31
 - test 7-5
 - utility 4-6

Q

- QAPLus/PRO diagnostic program 7-5

R

- RAM upgrade kits, installing 3-3
- records, device A-1
- remove and replace
 - adapters 7-35
 - backplane 7-48
 - battery 7-47
 - diskette drive 7-36
 - front fan 7-38
 - hard disk drive 7-37
 - LED assembly 7-39
 - memory modules 7-45
 - power supply 7-37
 - power switch 7-40
 - procedures for 7-1, 7-34
 - processor chip 7-43
 - SBC 7-40
- remove cover 3-2
- removing the system unit from its mounting 7-35
- replacement parts 8-1
- requirements, grounding E-12
- restore configuration 4-6
- revision level, verifying flash 4-31
- ROM (read-only memory) 4-31
- ROM shadowing 4-19
- run selected module tests 7-9

S

- safety
 - electrical E-8
 - general E-7
 - information E-7
 - inspection guide E-11
- scripting 7-8
- security features 4-3
- security option, drive 4-14
- selected module tests, running 7-9
- selected tests in test groups, changing 7-9
- self-tests, internal 5-1, 5-2
- sensor, temperature 4-29
- serial devices, external 4-26
- serial IR (SIR) standards 6-8
- serial IR standards 6-8
- serial port 4-25
- serial port assignments 4-26
- serial port pin assignments C-7
- service
 - information 7-1
- service diagnostic program 7-5
- set date and time 4-13
- shadow ROM 4-19
- SIMMs, installing 3-3
- single-board computer (IBM SBC)
 - component layout 6-2

- single-board computer (IBM SBC) (*continued*)
 - connectors 6-5
 - features 6-1
 - FRUs 8-2
 - indicators 6-3
 - installing 3-3
 - jumpers and switches 4-24
 - memory subsystem 6-2
 - memory upgrade 3-3
 - parts catalog 8-2
 - power-supply connections 7-17
 - remove 3-3
 - removing and replacing 7-40
 - switch functions 6-12, C-6
 - updating flash EEPROM 4-31
 - video subsystem 6-3
- slow IR (SIR) standard 6-8
- software
 - errors 5-9
 - problems 5-1, 5-2
 - solving problems 5-1
- spacers, card hold-down 3-6
- special characters 4-31
- specifications 1-4
- start options 4-16
- starting
 - Configuration/Setup Utility program 4-7
 - diagnostic programs 5-3
 - system unit 5-2
- startup-sequence control 4-4
- static-sensitive devices, handling E-12
- stopping tests 7-10
- storage device, mass, configuration information 4-12
- SVGA
 - advantages 4-30
 - description 4-30
 - languages 4-31
 - software compatibility 4-30
 - special characters 4-31
 - video configuration 4-31
- switching off power 7-34
- symptom-to-FRU index 7-19
- symptoms, beep 7-20
- symptoms, no beeps 7-21
- system memory, installing 3-3
- system memory, replacing 7-45
- system records A-1
- system security option 4-14
- system summary option 4-9
- system unit, opening 7-35

T

- test group, memory 7-8
- test groups, viewing 7-7

- test program, hardware 5-1
- test scripts 7-8
- test the system unit 5-2
- tests menu, module 7-6
- tests, stopping 7-10
- thermal monitor 4-29
- time and date, setting 4-13
- timer, watchdog 4-29
- tools, diagnostic 5-1
- top cover (FRUs) 8-3
- top-view dimensions (7587 Computer) B-2
- trademarks and service marks E-18
- transferring data 4-27
- troubleshooting charts 5-4

U

- undetermined problems 7-33
- unified memory architecture 6-3
- universal serial bus (USB)
 - port checkout 7-13
 - port connector 6-8
 - ports 4-29
 - setup option 4-18
- update programs, downloading 7-2
- user error problems 5-1
- using QAPLus/PRO program 7-5
- using test programs 7-5
- utility program, Configuration/Setup 4-6

V

- verifying flash revision level 4-31
- vertical-refresh rate 4-31
- video connector 6-9
- video drivers
 - See device drivers
- video graphics subsystem 6-3
- video memory setup option 4-18
- video setup option 4-12
- vital product data code 7-2
- voltage selection, processor C-6
- voltage selection, processor core 6-14
- voltage setting 2-1
- voltage-selection switch 5-2

W

- watchdog timer 4-29
- watchdog/thermal setup option 4-18
- Web site 7-2



Part Number: 11N9741



Printed in the United States of America
on recycled paper containing 10%
recovered post-consumer fiber.

11N9741

